



**SCHURTER**  
ELECTRONIC COMPONENTS

Schurter

**SCHURTER**  
ELECTRONIC COMPONENTS


CPS19-LA00A10-SNCCWTWF-AI0CMVAR-W1027-S

Part Number:	CPS19-LA00A10-SNCCWTWF-AI0CMVAR-W1027-S
Manufacturer/Brand:	Schurter
Product description	SWITCH PUSHBUTTON SPST 100MA 42V
Datasheets:	 CPS19-LA00A10-SNCCWTWF-AI0CMVAR-W1027-S.pdf
RoHs Status	 Lead free / RoHS Compliant
Ship From	Hong Kong
Shipment Way	DHL/Fedex/TNT/UPS/EMS

REQUEST FOR QUOTATION

Image may be representation. See specifications for product details.

Specifications of CPS19-LA00A10-SNCCWTWF-AI0CMVAR-W1027-S

PART NUMBER	CPS19-LA00A10-SNCCWTWF-AI0CMVAR-W1027-S
MANUFACTURER	Schurter
DESCRIPTION	SWITCH PUSHBUTTON SPST 100MA 42V
LEAD FREE STATUS / ROHS STATUS	Lead free / RoHS Compliant
DATA SHEET	 CPS19-LA00A10-SNCCWTWF-AI0CMVAR-W1027-S.pdf
VOLTAGE RATING - DC	60V
VOLTAGE RATING - AC	42V
TYPE	Capacitive, Illuminated
TERMINATION STYLE	Wire Leads
SWITCH FUNCTION	Off-On
SERIES	CPS
PANEL CUTOOUT DIMENSIONS	Circular - 19.10mm Dia
PACKAGING	Bulk
OPERATING TEMPERATURE	-40°C ~ 60°C
MOUNTING TYPE	Panel Mount, Front
MOISTURE SENSITIVITY LEVEL (MSL)	1 (Unlimited)
MECHANICAL LIFE	-
LEAD FREE STATUS / ROHS STATUS	Lead free / RoHS Compliant
INGRESS PROTECTION	IP67 - Dust Tight, Waterproof
ILLUMINATION VOLTAGE (NOMINAL)	5 ~ 28 VDC
ILLUMINATION TYPE, COLOR	LED, Cyan/Magenta
FEATURES	Ceramic Actuator, Finger Guide, 0 Symbol
ELECTRICAL LIFE	-
DETAILED DESCRIPTION	Pushbutton Switch SPST Capacitive, Illuminated Panel Mount, Front
CURRENT RATING	100mA (AC/DC)
COLOR - ACTUATOR/CAP	Clear (White Filter/Diffuser)
CIRCUIT	SPST
ACTUATOR TYPE	Round, Button, Flush

Related Tags

Schurter CPS19-LA00A10-SNCCWTWF-AI0CMVAR-W1027-S	CPS19-LA00A10-SNCCWTWF-AI0CMVAR-W1027-S Distributor	CPS19-LA00A10-SNCCWTWF-AI0CMVAR-W1027-S Supplier
CPS19-LA00A10-SNCCWTWF-AI0CMVAR-W1027-S Price	CPS19-LA00A10-SNCCWTWF-AI0CMVAR-W1027-S Pictures	CPS19-LA00A10-SNCCWTWF-AI0CMVAR-W1027-S Image
CPS19-LA00A10-SNCCWTWF-AI0CMVAR-W1027-S PDF Datasheet	CPS19-LA00A10-SNCCWTWF-AI0CMVAR-W1027-S Download Datasheet	CPS19-LA00A10-SNCCWTWF-AI0CMVAR-W1027-S Datasheet
CPS19-LA00A10-SNCCWTWF-AI0CMVAR-W1027-S Stock	Buy CPS19-LA00A10-SNCCWTWF-AI0CMVAR-W1027-S	Buy Schurter CPS19-LA00A10-SNCCWTWF-AI0CMVAR-W1027-S
Schurter CPS19-LA00A10-SNCCWTWF-AI0CMVAR-W1027-S	Schurter Supplier	Schurter Distributor
Schurter CPS19-LA00A10-SNCCWTWF-AI0CMVAR-W1027-S	Schurter Inc. CPS19-LA00A10-SNCCWTWF-AI0CMVAR-W1027-S	

Related Products

<div><b>SCHURTER</b> ELECTRONIC COMPONENTS</div> <div><b>CPS19-LA00A10-SNCCWTWF-AI0CMVAR-W1025-S</b> Manufacturers: Schurter Description: SWITCH PUSHBUTTON SPST 100MA 42V In stock: Out stock</div> <div>RFQ</div>	<div><b>SCHURTER</b> ELECTRONIC COMPONENTS</div> <div><b>CPS19-LA00A10-SNCCWTWF-AI0CMVAR-W1021-S</b> Manufacturers: Schurter Description: SWITCH PUSHBUTTON SPST 100MA 42V In stock: Out stock</div> <div>RFQ</div>
<div><b>SCHURTER</b> ELECTRONIC COMPONENTS</div> <div><b>CPS19-LA00A10-SNCCWTWF-AI0CMVAR-W1024-S</b> Manufacturers: Schurter Description: SWITCH PUSHBUTTON SPST 100MA 42V In stock: Out stock</div> <div>RFQ</div>	<div><b>SCHURTER</b> ELECTRONIC COMPONENTS</div> <div><b>CPS19-LA00A10-SNCCWTWF-AI0CMVAR-W1022-S</b> Manufacturers: Schurter Description: SWITCH PUSHBUTTON SPST 100MA 42V In stock: Out stock</div> <div>RFQ</div>
<div><b>SCHURTER</b> ELECTRONIC COMPONENTS</div> <div><b>CPS19-LA00A10-SNCCWTWF-AI0CMVAR-W1023-S</b> Manufacturers: Schurter Description: SWITCH PUSHBUTTON SPST 100MA 42V In stock: Out stock</div> <div>RFQ</div>	<div><b>SCHURTER</b> ELECTRONIC COMPONENTS</div> <div><b>CPS19-LA00A10-SNCCWTWF-AI0CMVAR-W1029-S</b> Manufacturers: Schurter Description: SWITCH PUSHBUTTON SPST 100MA 42V In stock: Out stock</div> <div>RFQ</div>
<div><b>SCHURTER</b> ELECTRONIC COMPONENTS</div> <div><b>CPS19-LA00A10-SNCCWTWF-AI0CMVAR-W1031-S</b> Manufacturers: Schurter Description: SWITCH PUSHBUTTON SPST 100MA 42V In stock: Out stock</div> <div>RFQ</div>	<div><b>SCHURTER</b> ELECTRONIC COMPONENTS</div> <div><b>CPS19-LA00A10-SNCCWTWF-AI0CMVAR-W1032-S</b> Manufacturers: Schurter Description: SWITCH PUSHBUTTON SPST 100MA 42V In stock: Out stock</div> <div>RFQ</div>
<div><b>SCHURTER</b> ELECTRONIC COMPONENTS</div> <div><b>CPS19-LA00A10-SNCCWTWF-AI0CMVAR-W1028-S</b> Manufacturers: Schurter Description: SWITCH PUSHBUTTON SPST 100MA 42V In stock: Out stock</div> <div>RFQ</div>	<div><b>SCHURTER</b> ELECTRONIC COMPONENTS</div> <div><b>CPS19-LA00A10-SNCCWTWF-AI0CMVAR-W1033-S</b> Manufacturers: Schurter Description: SWITCH PUSHBUTTON SPST 100MA 42V In stock: Out stock</div> <div>RFQ</div>
<div><b>SCHURTER</b> ELECTRONIC COMPONENTS</div> <div><b>CPS19-LA00A10-SNCCWTWF-AI0CMVAR-W1026-S</b> Manufacturers: Schurter Description: SWITCH PUSHBUTTON SPST 100MA 42V In stock: Out stock</div> <div>RFQ</div>	<div><b>SCHURTER</b> ELECTRONIC COMPONENTS</div> <div><b>CPS19-LA00A10-SNCCWTWF-AI0CMVAR-W1030-S</b> Manufacturers: Schurter Description: SWITCH PUSHBUTTON SPST 100MA 42V In stock: Out stock</div> <div>RFQ</div>